

FLOOR FURNACES

These models offer affordable solutions for limitedspace floor plans, remodels and remote cabin locations. Williams' Floor Furnaces use no above-the-floor room space and efficiently circulate warm air by natural convection, without the aid of a blower.

Our models are fitted with an automatic floor register grille temperature control.





WILLIAMS™

FLOOR FURNACES

MODEL NUMBER		BTU/hr.	BTU/hr.	EFFICIENCY PERCENT		DIMENSIONS (INCHES)			FLOOR OPEINING (IN.)			SHIPPING WEIGHT
NATURAL	PROPANE	INPUT	OUTPUT	THERMAL	AFUE	WIDTH	LENGTH	HEIGHT	WITHD	LENGTH	THERMOSTAT	(LBS.)
4505622A	4505621A	45,000	31,000	70	58.0	24	32	28 ½	24 1/4	32 ¾	MILLIVOLT	147
6005622A	6005621A	60,000	42,000	70	58.0	24	42	28 ½	24 1/4	42 3/8	MILLIVOLT	174

Elevation rating from sea level to 2,000'

Consult Owner's Manual for installation of product at elevations over 2000'

1/2" Gas Connection

FFATURES

"MATCHLESS" PILOT IGNITER


All models include a "matchless" pilot igniter that assures convenient pilot lighting without matches.

FLOOR REGISTER TEMPERATURE CONTROL

Williams' Floor Furnaces are equipped with an automatic floor register grille temperature control. This meets the latest American National Standards Institute Requirements. In extreme weather conditions, this control may be overridden to allow increased heat output


INTERIOR FURNACE CLEARANCES

- between the floor furnace and adjacent wall.
- between the floor furnace and doors, draperies or 12" other combustible materials.
- walking space along two sides of the furnace.

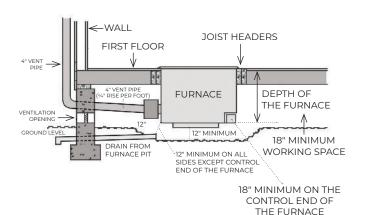

EASY INSTALLATION

THERMOSTAT SOLD SEPARATELY part number P322016

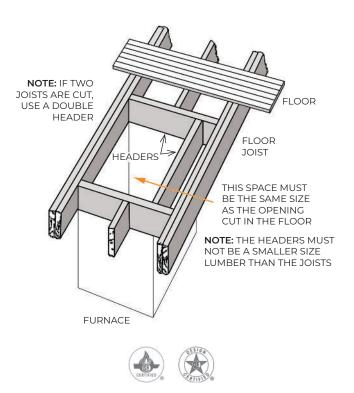

CONVERSION KITS

MODEL SERIES	NATURAL TO PROPANE	PROPANE TO NATURAL		
450A	8953	8955		
600A	8954	8956		





WARNING: This product can expose you to chemicals including epichlorohydrin which is known to the State of California to cause cancer and birth defects and/or other reproductive harm. For more information go to www.p65warnings.ca.gov

IMPORTANT

ANY WARRANTY CONSIDERATIONS ARE CONTINGENT ON INSTALL ATION BY A QUALIFIED INSTALLER (CONTRACTOR). SELF-INSTALLATION IS PROHIBITED AND WILL INVALIDATE YOUR WARRANTY.

- · Read owner's manual before using/installing
- Photographs are representative only.
- Check local codes and ordinances for permitted uses.
 Consult installation manual for clearances prior to installation.
- We reserve the right to amend product specifications without notice.
 Installation and servicing recommended by a qualified service person.
- · Please read the warranty for any limitations of disclaimers. Combustion chamber carries a 10-year
- limited warranty. All other parts carry a one-year limited warranty.

 Venting must comply with the "Venting and Chimney Requirements" section of the instruction manual.

 Massachusetts Approval G3-0816-23.