


RIGHT HAND SHOWN


MODEL	<u>A</u>	В	C	ום	<u>E</u>	FI	G	FILTER SIZE
400	20 1/4	14 1/4	57 5/8	10 1/2	7 1/8	2 1/2	4 3/16	(1) 16x 16x 1
600	20 1/4	14 1/4	57 5/8	10 1/2	8 1/2	2 1/2	2 13/16	(1) 16x 16x 1
800	20 1/4	14 1/4	57 5/8	10 1/2	9 1/2	2 1/2	1 13/16	(1) 16x 16x 1

D101306

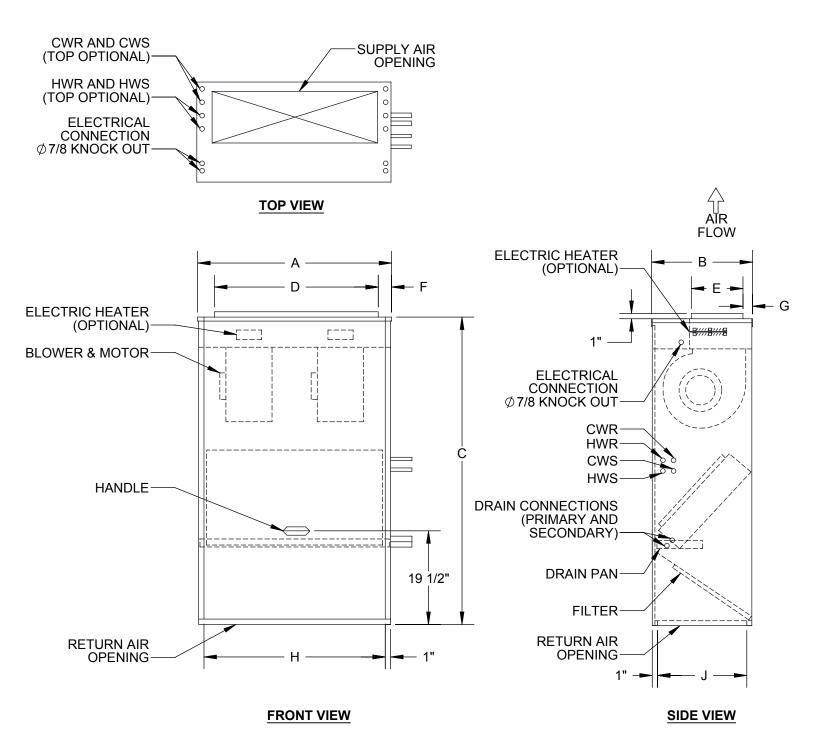



RIGHT HAND SHOWN

MODEL	A	В	<u>c</u>	D	E	<u>F</u>	G	H	J	FILTER SIZE
1000	20 3/8	20 1/4	57 3/4	12	10 3/8	4 1/8	2 3/4	18 3/8	18 1/4	(1) 16x20x1
1200	20 3/8	20 1/4	57 3/4	12	10 3/8	4 1/8	2 3/4	18 3/8	18 1/4	(1) 16x20x1
1500	36	24 5/8	62 3/4	28	10 1/2	4	3	34	22 5/8	(2) 16x20x1
1800	36	24 5/8	62 3/4	28	10 1/2	4	3	34	22 5/8	(2) 16x20x1
2200	36	24 5/8	62 3/4	28	10 1/2	4	3	34	22 5/8	(2) 16x20x1
	•	•	•				•	•		D101307

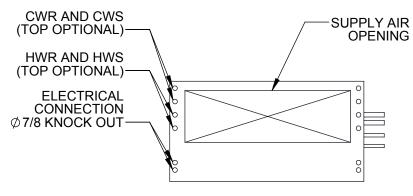

TOP VIEW

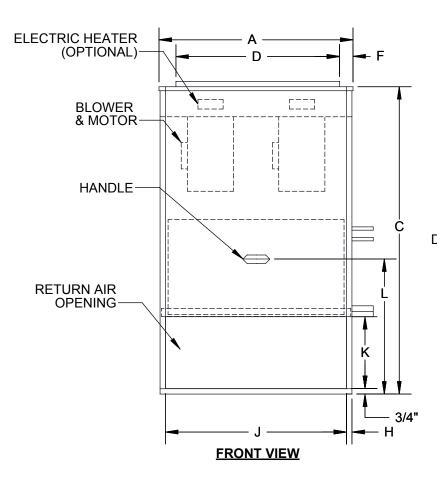


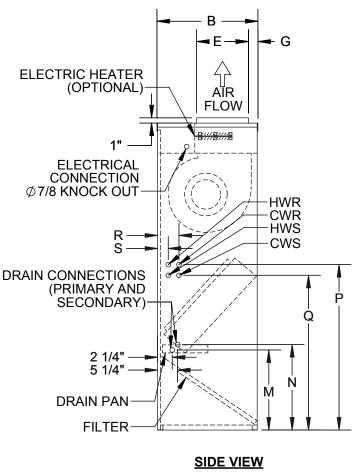



RIGHT HAND SHOWN

M ODEL	<u>A</u>	В	<u>c</u>	D	Ē	<u>F</u>	G	Ħ	<u>J</u>	ĸ	Ē	<u>M</u>	<u>N</u>	<u>P</u>	Q	<u>R</u>	<u>s</u>	BLOWER/ MOTOR	FILTER SIZE
400	20 1/4	14 1/4	57 5/8	10 1/2	7 1/8	2 1/2	4 3/16	1 5/8	18 7/8	11 1/4	16	13 1/8	14	30 15/16	28 15/16	4 11/16	2 9/16	1	(1) 16x 16x 1
600	20 1/4	14 1/4	57 5/8	10 1/2	8 1/2	2 1/2	2 3/16	1 5/8	18 7/8	11 1/4	16	13 1/8	14	30 15/16	28 15/16	4 11/16	2 9/16	1	(1) 16x 16x 1
800	20 1/4	14 1/4	57 5/8	10 1/2	9 1/2	2 1/2	1 3/16	1 5/8	18 7/8	11 1/4	16	13 1/8	14	30 15/16	28 15/16	4 11/16	2 9/16	1	(1) 16x 16x 1
1000	20 3/8	20 1/4	57 3/4	12	10 3/8	4 1/8	2 3/4	1 1/2	17	12 1/4	17 1/8	14 3/4	15 5/8	30 15/16	29	4 1/8	2 1/8	2	(1) 17x22x1
1200	20 3/8	20 1/4	57 3/4	12	10 3/8	4 1/8	2 3/4	1 1/2	17	12 1/4	17 1/8	14 3/4	15 5/8	30 15/16	29	4 1/8	2 1/8	2	(1) 17x22x1
1500	36	24 5/8	62 3/4	28	10 1/2	4	3	1 5/8	32 1/2	13 5/8	19 1/8	15	15 7/8	31	29	4 1/8	2 1/8	2	(2) 16x20x1
1800	36	24 5/8	62 3/4	28	10 1/2	4	3	1 5/8	32 1/2	13 5/8	19 1/8	15	15 7/8	31	29	4 1/8	2 1/8	2	(2) 16x20x1
2200	36	24 5/8	62 3/4	28	10 1/2	4	3	1 5/8	32 1/2	13 5/8	19 1/8	15	15 7/8	31	29	4 1/8	2 1/8	2	(2) 16x20x1

CV-B REV A FR RTN TOP SPLY D107741

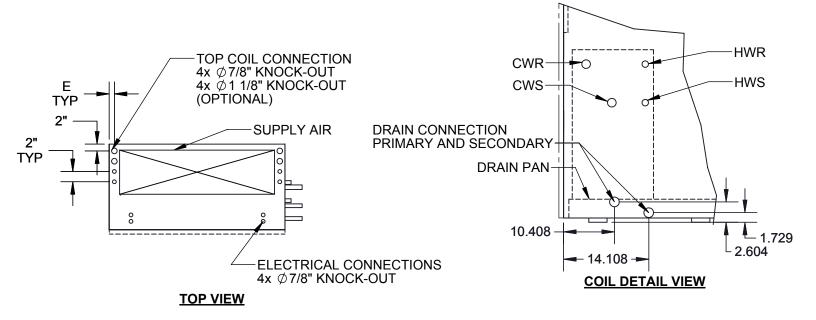

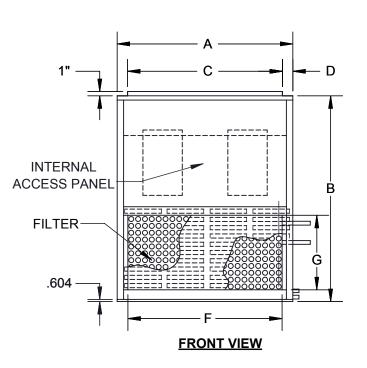


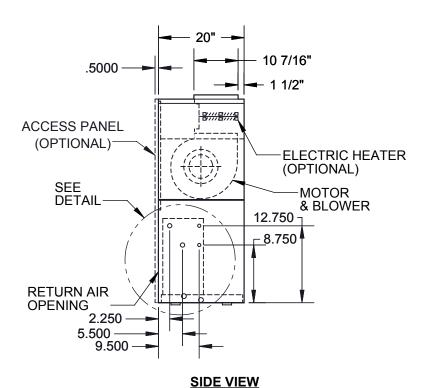


RIGHT HAND SHOWN

M ODEL	<u>A</u>	В	<u>C</u>	₽	Ē	<u>F</u>	G	BLOWER QTY	FILTER SIZE
600	21	42	12 1/4	4 3/8	1 1/2	16	14 1/2	1	(1) 16x 16x 1
800	25	42	12 1/4	6 3/8	1 1/2	20	14 1/2	1	(1) 16x20x1
1000	25	45	12 1/4	6 3/8	1 1/2	20	16 1/2	1	(1) 18x20x1
1200	30	45	12 1/4	8 7/8	1 1/2	25	17	1	(1) 20x25x1
1500	37	48	25 1/4	5 7/8	1 1/2	32	17	2	(2) 16x20x1
1800	37	48	32 1/4	2 3/8	1 1/4	32	18 1/2	2	(2) 16x20x1
2200	41	48	36 1/4	2 3/8	1 1/4	36	18 1/2	2	(1) 16x20x1
									(1)20x20x1


D101310

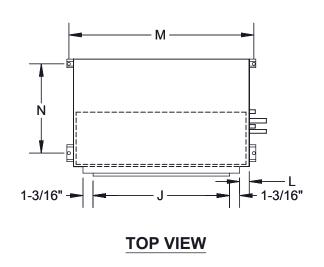

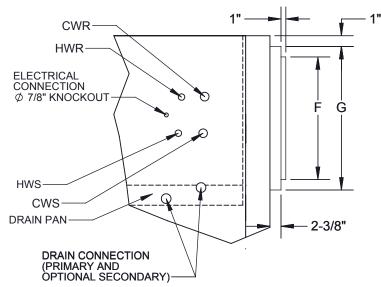

RETURN-AIR OPENING FILTER SUPPLY-AIR OPENING Н **FRONT VIEW**

COIL CONNECTION DETAIL

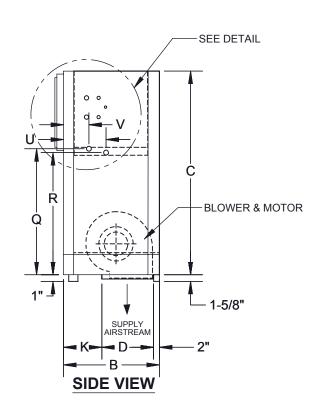

RIGHT HAND UNIT SHOWN

M ODEL	<u>A</u>	В	<u>c</u>	₫	Ē	E	G	H	<u>J</u>	ĸ	Ŀ	M	N	Q	R	ū	<u>v</u>	Blower/ Motor	Filter Size
004-006	24-1/16	27-1/8	46	14	20	17-1/2	20	2-1/32	18	11-1/8	1	26	20-1/4	28-11/16	27-1/2	12	8	1	(1) 16x20x1
800	24-1/16	27-1/8	46	14	20	17-1/2	20	2-1/32	18	11-1/8	1	26	20-1/4	28-11/16	27-1/2	12	8	1	(1) 16x20x1
010	30-1/16	27-1/8	46	14	20	17-1/2	20	5-1/32	23	11-1/8	1	32	20-1/4	28-11/16	27-1/2	12	8	1	(1) 20x20x1
012	30-1/16	27-1/8	46	14	20	17-1/2	20	5-1/32	23	11-1/8	1	32	20-1/4	28-11/16	27-1/2	12	8	1	(1) 20x25x1
015	38-1/16	27-1/8	46	16	22	17-1/2	20	8-1/32	29-11/16	9-1/8	1-3/8	40	20-1/4	28-11/16	27-1/2	12	8	2	(2) 16x20x1
018	38-1/16	27-1/8	54	18	24	17-1/2	20	7-1/16	29-11/16	7-1/8	1-3/8	40	20-1/4	34-5/16	33-1/8	12-1/8	8-1/8	2	(2) 16x20x1
022	46-18	27-1/4	60	20	30	22-9/16	25	8-1/8	37-11/16	5-1/4	1-3/8	48	20-1/2	34-5/16	32-1/16	12-1/8	8-1/8	2	(1) 16x20x1
																			(1) 20x20x1

CV-G/CV-Q D107778 **REV A**

- Coil connections determined by facing the suppy-air opening. Electrical junction box is located on the same side as the coil conections.
- Unit must be installed level and condensate drain lines should be trapped.